

Big Top Party Rental

36 Hillman Street Unit #4

Tewksbury, MA 01876

Phone: (978) 858-0250

DIRECTIONS FOR USE OF KARAOKE MACHINE:

- 1.) Plug in black power cord from the back of the system to a 3-prong outlet.
- 2.) Run RCA cord from back of machine (Yellow "Video Outlet") to television.
- 3.) When renting our television, you plug the RCA cord into front of the TV where it says "Video In". Make sure TV is on channel 02 then press the Channel Down button so the TV is on Channel "LINE". Other TV's have different features. Read your TV's manual.
- 4.) Turn on the "Power" button on Karaoke Machine. Make sure the "CDG" button is on.
- 5.) Press "Open/Close" and insert your CD and press "Open/Close" again.
- 6.) Press the "Play/Stop" button and your music should start playing.
- 7.) Plug in both Microphones and test them before you start.
- 8.) Put CD in the machine and you are ready to use.

***Please Note:** Microphones are a very fragile item and must be treated with good care. Do Not use this system in the rain or sun. We recommend only using this system should only be used indoors so system is in a cool and dry place with protection from the sun and rain. If used outdoors make sure that this system is in a safe, cool, dry place. Do not store outside overnight. Make sure in the back that the **SPEAKER SELECT** is on **INT** and that the **VIDEO SYSTEM** is on **NTSC**. If for some reason if you don't have a TV, the words to all the songs are in the CD Covers.*

*****If you have any further questions or there is any problem with the machine please call Bobby at (978) 505-0077. We are available seven days a week. (If you fail to call, and leave a detailed message, we will be forced to assume the rental went smoothly.)*****

